

Quick Start Guide

Minnow 1.2 T
Minnow 1.2 TH



SENONICS 

Version 1.0, September 2023



Datasheet:

www.senonics.com/files/MinnowTH_Datasheet.pdf
www.senonics.com/files/MinnowT_Datasheet.pdf

User Guide :

www.senonics.com/files/MinnowUserGuide.pdf

Windows Installer

www.senonics.com/bin/SenonicsPCApplication_Installer.zip

Mac Installer

www.senonics.com/mac-installer.html

Logger Configuration


Connect the Minnow 1.2 logger to your PC or Mac.

Start the Senonics Application.

Configure the options in the configuration pane -for example, logger ID, logger start, logger interval etc.

Finally press the "Configure" button to configure the logger. This will take a few seconds to complete. At this point your logger can be disconnected from the PC or Mac for use.


Other more advanced configurations described in the User Guide.

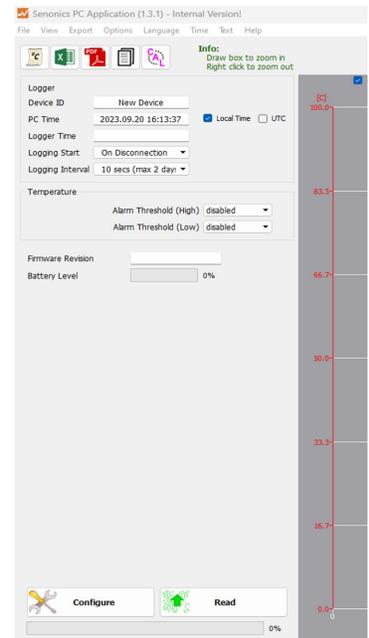

Reading Data

Connect your logger to a PC or Mac and restart the Senonics Application. Press "Read". All data from the logger will then be contained within the

GUI.

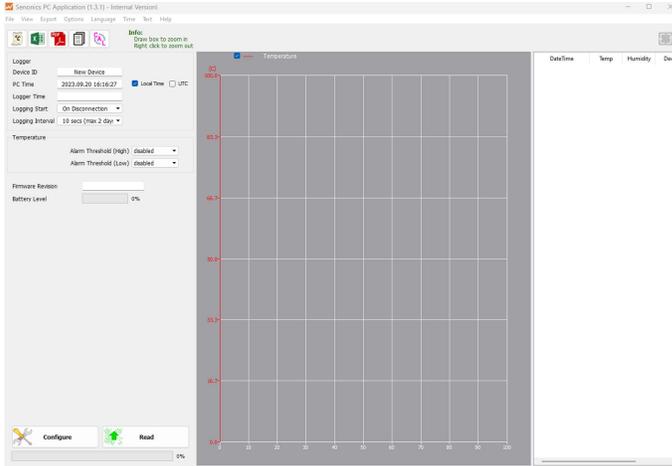

Battery

Minnow 1.2 logger runs on a standard CR2032 coin cell battery.

To replace the battery, first remove the Minnow 1.2 back-cover by unscrewing the four screws (#1 Philips) at the rear of the logger. Remove the PCB and replace the battery. Re-insert the PCB, re-attach the cover and tighten the fastener screws again being careful not to over tighten. Be sure to Re-Configure your logger right away, as the battery will drain if not configured.

