

INSTRUCTIONS FOR 986HI INDOOR THERMOMETER / HYGROMETER

Features:

1. Simultaneous display of indoor temperature and indoor relative humidity
2. Measuring Range:
Indoor Temperature: -10°C to 50°C
Indoor Relative Humidity: 25% RH to 98% RH
3. Accuracy:
Indoor Temperature: $\pm 1^{\circ}\text{C}$
Indoor Relative Humidity: $\pm 3\%$ RH (50% RH to 80% RH)
 $\pm 5\%$ RH (<50% RH, >80% RH)
4. Uses 1 pcs AA battery
5. Maximum and minimum temperature and relative humidity memory function.

User Guide:

1. Slide open the battery door and remove the battery insulation tape.
2. Slide the battery door back in place. The unit will turn on automatically.
3. Allow temperature and relative humidity to steady out before taking the reading.
4. To check the indoor maximum and minimum temperature, push the button marked "THERMO MAX MIN" to show the maximum and minimum temperature of the period from the last reset.
5. To check the indoor maximum and minimum relative humidity, push the button marked "HYGRO MAX MIN" to show the maximum and minimum relative humidity of the period from the last reset.
6. Reset the indoor temperature and relative humidity memory by pressing the button marked "RESET" once.

User Guide:

1. Slide open the battery door and remove the battery insulation tape.
2. Slide the battery door back in place. The unit will turn on automatically.
3. Allow temperature and relative humidity to steady out before taking the reading.
4. To check the indoor maximum and minimum temperature, push the button marked "THERMO MAX MIN" to show the maximum and minimum temperature of the period from the last reset.
5. To check the indoor maximum and minimum relative humidity, push the button marked "HYGRO MAX MIN" to show the maximum and minimum relative humidity of the period from the last reset.
6. Reset the indoor temperature and relative humidity memory by pressing the button marked "RESET" once.