

PULSE101A

PULSE DATA LOGGER



Features


- 10 Year Battery Life
- 1 Second Reading Rate
- Multiple Start/Stop Function
- Ultra High Speed Download
- 500,000 Reading Storage Capacity
- Memory Wrap
- Battery Life Indicator
- Optional Password Protection
- N.I.S.T. Traceable
- Field Upgradeable

Benefits

- Simple Setup and Installation
- Minimal Long-Term Maintenance
- Long-Term Field Deployment

Applications

- Compatible with Dry Contact Closures
- Flow Rate Recording
- Gas and Water Metering
- Traffic Studies
- Frequency Recording
- Air Speed Indicators
- General Purpose Pulse Recording

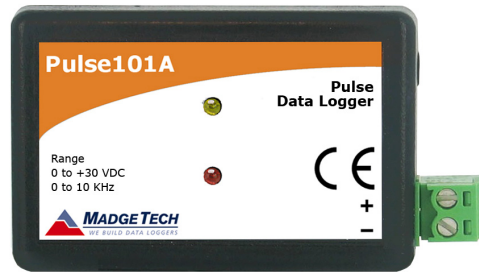

The Pulse101A is one of MadgeTech's newest data loggers. It is part of a new series of low cost, state-of-the-art data logging devices. MadgeTech has taken the lead in offering the most advanced, low cost, battery powered data loggers in the world today.

The Pulse101A offers a 10 year battery life, 1 second reading rate, a multiple start/stop function, ultra-high speed download capability, 500,000 reading storage capacity, optional memory wrap, battery life indicator, optional password protection and more. Our research has shown that the Pulse101A is second to no other data logger when it comes to price and performance.


Using the MadgeTech Software, starting, stopping and downloading from the Pulse101A is simple and easy. Graphical, tabular and summary data is provided for analysis and data can be viewed in multiple units, using the Engineering Units function. The data can also be automatically exported to Excel® for further calculations.

As the leader in low power data logger technology, MadgeTech continuously improves its products and develops solutions to meet ever-changing challenges. The Pulse101A was designed with our customers in mind. MadgeTech offers free firmware upgrades for the life of the product so that data loggers already deployed in the field can grow with new technological developments. Units do not need to be returned to the factory for upgrades. The user can do this automatically from any PC.

MADGETECH DATA LOGGER SOFTWARE

Key

- A Graph View
- B Tabular Data View
- C Statistics
- D Digital Calibration
- E Copy to Excel®

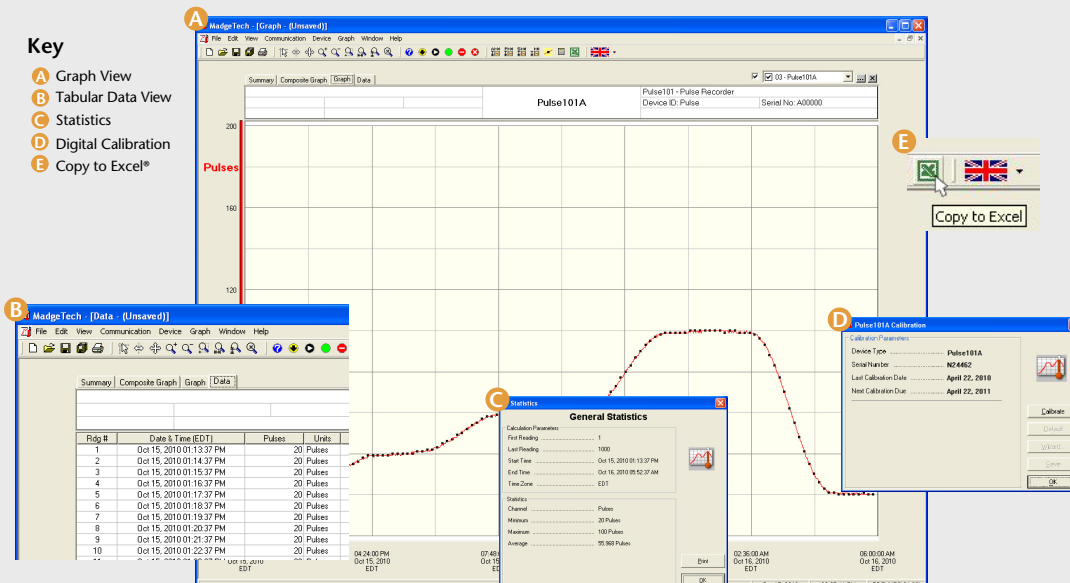

Software Features:

- Multiple graph overlay
- Statistics
- Digital calibration
- Zoom in/ zoom out
- Full time zone support
- Data annotation
- Min./Max./Average lines
- Data table view
- Automatic report generation
- Summary view
- Multilingual


PULSE101A SPECIFICATIONS*

Input Connection:	Removable screw terminal
Maximum Pulse Rate:	10KHz
Input Range:	0 to 30VDC continuous
Input Low:	< 0.4 V
Input High:	> 2.8 V
Internal Weak Pull-Up:	<60µA
Input Impedance:	>60kΩ
Minimum Pulse Width/	≥ 10 microseconds
Contact Closure Duration:	
Reading Rate:	1 reading every second to 1 every 24 hours
Memory:	500,000 readings; software configurable memory wrap 250,000 readings in multiple start/stop mode
Wrap Around:	Yes
Start Modes:	• Immediate start • Delay start up to 18 months • Multiple pushbutton start/stop
Stop Modes:	• Manual through software • Timed (specific date and time)
Multiple Start/Stop Mode:	Start and stop the device multiple times without having to download data or communicate with a PC
Multiple Start/Stop Mode	To start the device: Activation: <i>Press and hold the pushbutton for 5 seconds, the green LED will flash during this time. The device has started logging.</i>
	To stop the device: <i>Press and hold the pushbutton for 5 seconds, the red LED will flash during this time. The device has stopped logging.</i>
Real Time Recording:	The device may be used with PC to monitor and record data in real-time
LED Functionality:	Green LED blinks: 10 second rate to indicate logging 15 second rate to indicate delay start mode
	Red LED blinks: 10 second rate to indicate low battery and/or full memory
Password Protection:	An optional password may be programmed into the device to restrict access to configuration options. Data may be read out without the password.

Engineering Units: Native measurement units can be scaled to display measurement units of another type. This is useful when monitoring outputs from different types of sensors such as flow rate, wind speed and more

Battery Type: 3.6V lithium battery included; **user replaceable**

Battery Life: 10 years typical, dependent upon frequency and duty cycle

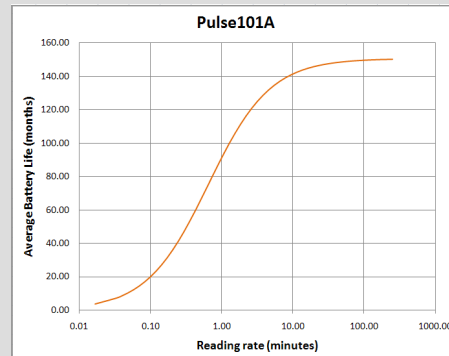

Graph display of the device recording in a 25°C environment.

Time Accuracy: ±1 minute/month (at 20°C/68°F, stand alone data logging)

Computer Interface: USB (interface cable required); 115,200 baud

Software: XP SP3/Vista/Windows 7

Operating Environment: -40°C to +80°C (-40°F to +176°F), 0%RH to 95%RH non-condensing

Dimensions: 1.4" x 2.5" x 0.6" (36mm x 64mm x 16mm)

Weight: 0.9 oz (24 g)

Materials: ABS Plastic

Approvals: CE

BATTERY WARNING: WARNING: FIRE, EXPLOSION, AND SEVERE BURN HAZARD. DO NOT SHORT CIRCUIT, CHARGE, FORCE OVER DISCHARGE, DISASSEMBLE, CRUSH, PENETRATE OR INCINERATE. BATTERY MAY LEAK OR EXPLODE IF HEATED ABOVE 80°C (176°F).

*SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE. SPECIFIC WARRANTY AND REMEDY LIMITATIONS APPLY. CALL 1-603-456-2011 OR GO TO WWW.MADGETECH.COM FOR DETAILS.

ORDERING INFORMATION

MODEL	DESCRIPTION
PULSE101A	Pulse Data Logger
IFC200	Software, manual and USB interface cable
LTC-7PN	Replacement battery for Pulse101A

For quantity discounts call 1300 737 871 or email customer-service@instrumentchoice.com.au

Supplied in Australia by Instrument Choice
Call our scientists on 1300 737 871
www.instrumentchoice.com.au

ASK ABOUT
OUR OTHER
DATA
LOGGERS

Temperature
Humidity
Pressure
pH
Level
Shock
LCD Display
Pulse/Event/State
Current
Voltage
Wireless
Intrinsically Safe
Spectral Vibration
Motion