


WARRANTY

The manufacturer warrants all models of the TC2800 to be free from defects in material and workmanship under normal use and service as specified within the operator's manual. The manufacturer shall repair or replace the unit within twelve (12) months from the original date of shipment after the unit is returned to the manufacturer's factory, prepaid by the user, and the unit is disclosed to the manufacturer's satisfaction, to be thus defective. This warranty shall not apply to any unit that has been repaired or altered other than by the manufacturer. The aforementioned provisions do not extend the original warranty period of the unit which has been repaired or replaced by the manufacturer. Batteries are not covered by warranty.

The manufacturer assumes no liability for the consequential damages of any kind through the use or misuse of the TC2800 product by the purchaser or others. No other obligations or liabilities are expressed or implied. All damage or liability claims will be limited to an amount equal to the sale price of the TC2800, as established by the manufacturer.

Other Products From EDTM

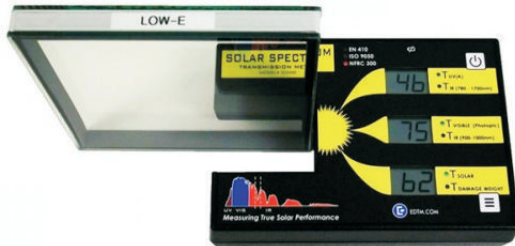

Solar Spectrum Transmission Meter
Full spectrum measurements
Values calculated to 3 standards
Tuv, Tvis, Tsolar, Tir & Tdw

(Model# SS2450)



GLASS-CHEK PRO
Glass & Air Space Thickness Meter
+ Identify Low E Type & Location
(Model# GC3000)



Strengthened Glass Detector
Identify tempered glass in the field
Solid state, rugged design
(Model# SG2700)

TINT-CHEK+ Window Tint Meter

MODEL# TC2800



FEATURES:

- Increased accuracy with resolution of 0.1%
- Back-lit display for use at night or evenings
- Quick Light Transmission Measurements
- All Digital with micro-processor control
- No mechanical lever switch to scratch glass
- Insert the glass in any direction
- Slimmer pocket-friendly design: 5" x 2.5" x 1"
- Real-time measurements with no locking of display
- Automatic power-off feature for extended battery life
- Auto-calibration at start-up
- LED light source for longevity
- Replace Battery Indicator
- Convenient push-on/push-off membrane power switch
- Light weight
- Patent-Pending technology to remove ambient light

QUICK-START DIRECTIONS

STEP 1

ROLL DOWN THE WINDOW AT LEAST 3 INCHES.

STEP 2

CLEAN THE GLASS.

STEP 3

TURN THE METER ON. THE DISPLAY WILL READ 100% WHEN THE METER IS READY TO BEGIN TESTING.

STEP 4

SLIDE THE METER OVER THE EDGE OF THE GLASS (AS SHOWN) AND READ THE MEASUREMENT RESULTS ON THE DISPLAY.

STEP 5

RE-TEST THE WINDOW TO CONFIRM THE ACCURACY OF YOUR FIRST TEST.



TINT-CHEK.COM

745 Capital Commons Drive
Toledo, Ohio 43615 USA
PHONE: (419) 861-1030
FAX: (419) 861-1031

BASIC OPERATION

Turn the meter on and wait for the system to self-calibrate. After the display shows 100%, you can slide the unit over the sample to measure the light transmission characteristics. Here are a few helpful reminders for conducting transmission measurements. For the most accurate transmission measurements, the glass should be held perpendicular to the sensor. Do not tilt the meter/glass at angles. Be aware that fingerprints, dirt, and defects on the glass can affect the transmission values.

When you place the meter on the glass, slide the instrument completely on to the glass so it is pressing against the stop location. This will guarantee that the edge of the glass is not blocking the sensor during tests. Pay attention to the proximity of window film on the glass that might not cover the entire window. Testing the glass on the extreme edge of the window film will negatively impact the accuracy of your measurement.

The instrument will continually monitor its calibration during measurements. If the instrument detects any problems with the calibration, it will reset itself in between measurements. If you mistakenly turn the instrument on with a piece of glass already in position, the display will calibrate to read 100% with the glass in place. Simply remove meter from the glass sample and wait a few moments. The instrument will re-calibrate itself shortly after the glass is removed. After the display has returned to 100%, you may continue with your measurements.


If the display ever reads the word "LO", please verify there is nothing between the LED light source and the sensor. If there is, remove it from blocking the sensor and LED source. The unit will then re-calibrate and the display will show 100%, ready for additional measurements.

CALIBRATION STANDARDS

Two light transmission test standards accompany each meter. The standards have VLT values of approximately 25% and 58%. The actual calibrated values of each standard are indicated on the printed label applied to each standard. These standards were created using a NIST traceable source.

Use the standards to verify that your meter measures the VLT values within +/- 2% of their indicated values. On a regular basis you should verify that your meter is operating within specifications. Before measuring the standards, ensure they are clean and not scratched. Blow off any dust that may appear on the surface, and remove any finger prints with a lint-free cloth. If the meter measures outside of the +/-2% range, please inspect the quality of your calibration standards. If the standards are in great condition, then discontinue use of the meter until the calibration can be verified or corrected.

If you need to order replacement calibration standards, please reference Part# TC1810 when placing your order.

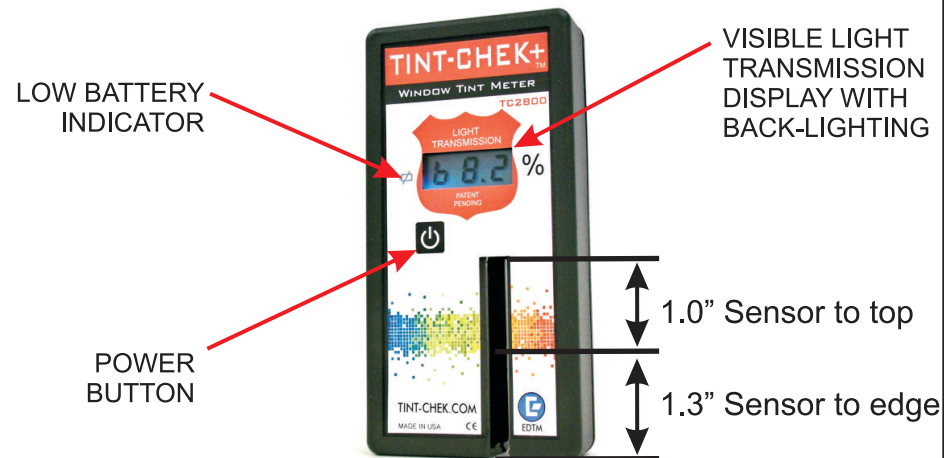

BATTERY REPLACEMENT

The TC2800 is powered by a 9 volt alkaline battery (included). When the battery voltage is getting too low to operate the meter, the low battery indicator will turn on. The instrument can still be used at this point, however it is recommended that the battery be replaced soon. Alkaline batteries are recommended for this product.

AUTO-POWER-OFF

The TC2800 instrument is equipped with an automatic power-off feature to extend the life of your battery. The instrument will automatically shut off after approximately 2 minutes if not used. You can also use the power switch to turn the meter off immediately after each use.

SPECIFICATIONS

Wavelength.....	550 Nanometers
Resolution.....	0.1%
Accuracy.....	+/- 2 Percentage Points
Repeatability	1 Percentage Point
Measurement Range.....	0 to 100% Light Transmission
Operating Temperature.....	0 F to 122 F (-17 C to +50 C)
Storage Temperature.....	-4 F to 158 F (-20 C to +70 C)
Testing Time	Continuous (1 sec initial response)
Light source.....	LED
Powered by	9V Alkaline Battery (Supplied)
Sample Thickness.....	0 to 0.25 inches (0 to 6.5 mm)
Minimum Sample Size.....	1 inch x 1/2 inch (25 x 13mm)
Instrument Dimensions.....	5 x 2.5 x 1 inches (127 x 63.5 x 25.4mm)
Instrument Weight.....	0.34 pound (0.15kg)

